



HP 110 Portable Computer Service Manual

(Including Versions A, AL, BD, BF, BK, BU, and BZ)

For all units with serial numbers before 2440A17889,
the service information in this manual must be
revised according to chapter 8.

© 1984 by Hewlett-Packard Company

**Reorder Number
00090-90021**

**Printed in U.S.A.
Edition 2 10/84**

Printing History

Edition 1		May 1984		Mfg. No. 00090-90022
Edition 2		October 1984		Mfg. No. 00090-90116

Contents

Chapter		Page
1	Product Information	
1.1	Introduction	1-1
1.2	Description	1-1
1.3	Specifications	1-2
1.4	Identification	1-4
1.5	Accessories	1-4
1.6	Test Equipment	1-5
2	Installation	
2.1	Preparation	2-1
2.2	Installation	2-1
2.3	Functional Verification	2-2
2.4	Configuration	2-2
3	Functional Description	
3.1	Introduction	3-1
3.2	CPU Circuit	3-3
3.2.1	CPU	3-3
3.2.2	CPU Buffers	3-4
3.2.3	Bus Select	3-5
3.2.4	RAM Select	3-5
3.2.5	ROM/Display RAM Select	3-5
3.3	System RAM/ROM	3-6
3.4	Mass Storage RAM	3-6
3.5	Address/Control Circuit	3-7
3.6	Configuration EPROM	3-7
3.7	PPU Circuit	3-8
3.7.1	PPU	3-8
3.7.2	PPU-Bus Interface	3-10
3.8	Keyboard Interface	3-10
3.9	Keyboard	3-12
3.10	LCD Interface	3-12
3.10.1	LCD Controller	3-12
3.10.2	Display RAM	3-13
3.10.3	Bus Latches and Buffers	3-13
3.11	Liquid-Crystal Display	3-14
3.12	Clock/Ready Circuit	3-14
3.13	HP-IL Interface	3-15
3.14	Serial Interface	3-16
3.15	Direct-Connect Modem	3-16
3.15.1	Power Switch	3-17
3.15.2	Modem IC	3-17
3.15.3	Tone-Dial Generator	3-18
3.15.4	Filter	3-18
3.15.5	Duplexer	3-18
3.15.6	Protective Interface	3-19
3.15.7	Prelimiter	3-20
3.15.8	Limiter	3-20
3.15.9	Carrier Detector	3-20
3.15.10	Billing Delay	3-21

Chapter		Page
3.16	Power Supply	3-21
3.16.1	Battery and Terminal Block	3-21
3.16.2	Regulator	3-22
3.16.3	Charger	3-22
3.16.4	LCD Supply	3-24
3.17	Power-Up Routine	3-24
4	Troubleshooting	
4.1	Overview	4-1
4.2	Troubleshooting Procedures	4-3
4.2.1	Main Diagnostic Procedure	4-3
4.2.2	Repair Procedures	4-12
4.3	Burning an EPROM	4-33
4.4	Testing the Recharger	4-35
5	Removal and Replacement	
5.1	Introduction	5-1
5.2	Removing the Battery	5-2
5.3	Separating the Case	5-5
5.4	Replacing the PCAs	5-7
5.5	Removing the Keyboard Module	5-9
5.6	Removing a Keyswitch	5-10
5.7	Removing the Display Module	5-11
5.8	Removing the Clutches and Display Cable	5-13
5.9	Removing ICs	5-16
6	Replaceable Parts	
7	Reference Information	
7.1	Introduction	7-1
7.2	Diagnostic Test Results	7-1
7.3	Signal Names	7-6
7.4	Descriptions of Diagnostic Tests	7-10
7.4.1	System Test	7-10
7.4.2	CPU Test	7-10
7.4.3	ROM Test	7-11
7.4.4	RAM Test	7-11
7.4.5	LCD Test	7-11
7.4.6	Keyboard Test	7-11
7.4.7	HP-IL Test	7-12
7.4.8	Modem Test	7-12
7.4.9	RS-232 Test	7-12
7.4.10	Beeper Test	7-13
7.4.11	Timer Test	7-13
7.4.12	Sleep Test	7-13
7.5	Service References	7-14
7.6	Service Equipment	7-14
7.6.1	RS-232 Test Connector	7-14
7.6.2	Diagnostic Module	7-15
8	Product History	
8.1	Introduction	8-1
8.2	Backdating History	8-1
9	Diagrams	

Illustrations

Figure	Title	Page
2-1	Recharger and I/O Receptacles	2-1
3-1	HP 110 Block Diagram	3-2
3-2	CPU Memory Map	3-3
3-3	Low Battery Sequence	3-23
3-4	Power-Up Sequence	3-25
4-1	Overview of Troubleshooting Procedures	4-2
4-2	Menu for Built-In Diagnostic Program	4-4
4-3	Menu for Disc-Based Diagnostic Program	4-5
4-4	Connecting the Diagnostic Module	4-33
4-5	Connecting EPROM-Burner Power Supply	4-34
4-6	Rechargers	4-36
5-1	Removing the Battery Cover	5-2
5-2	Disconnecting the Ground Straps	5-3
5-3	Removing the Terminal Block	5-3
5-4	Removing the Battery	5-4
5-5	Disconnecting the Terminal PCA	5-4
5-6	Removing the Bottom Label	5-5
5-7	Removing the Bottom Screws	5-5
5-8	Unplugging the Top Case Cables	5-6
5-9	Separating the Case	5-6
5-10	Unplugging the Modem PCA	5-7
5-11	Removing the Lower Ground Strap	5-7
5-12	Unplugging the I/O PCA	5-8
5-13	Removing the System PCA	5-8
5-14	Removing the Hinge Cover	5-9
5-15	Removing the Keyboard Module	5-10
5-16	Removing a Keycap	5-10
5-17	Removing the Display Nuts	5-12
5-18	Removing the Display Module	5-12
5-19	Removing the Hinge Cover	5-13
5-20	Removing the Clutch Nuts	5-14
5-21	Removing the Display Assembly	5-14
5-22	Removing the Clutch	5-15
5-23	Unlatching the Display Front	5-15
5-24	Removing the Clutch and Display Cable	5-16
5-25	Premelting the Solder	5-17
5-26	Extracting the IC	5-17
6-1	HP 110 Exploded View	6-2
6-2	Top Case Assembly Exploded View	6-4
6-3	Display Assembly Exploded View	6-6
6-4	Base Assembly Exploded View	6-8
7-1	RS-232 Connector Wiring Diagram	7-14
7-2	Diagnostic Module Block Diagram	7-15
7-3	Checking the Diagnostic Module	7-17
7-4	Diagnostic Module Component Location Diagram	7-22
7-5	Diagnostic Module Schematic Diagram	7-23
9-1	System PCA Component Location Diagram	9-3
9-2	System PCA Schematic Diagram—Sheet 1	9-3
9-3	System PCA Schematic Diagram—Sheet 2	9-5

Figure	Title	Page
9-4	System PCA Schematic Diagram—Sheet 3	9-7
9-5	I/O PCA Component Location Diagram	9-9
9-6	I/O PCA Schematic Diagram—Sheet 1	9-9
9-7	I/O PCA Schematic Diagram—Sheet 2	9-11
9-8	I/O PCA Schematic Diagram—Sheet 3	9-13
9-9	Modem PCA Component Location Diagram	9-15
9-10	Modem PCA Schematic Diagram	9-15
9-11	Keyboard PCA Schematic Diagram	9-17
9-12	Terminal Block PCA Component Location Diagram	9-17
9-13	U.S. Keyboard Layout	9-18
9-14	German Keyboard Layout	9-18
9-15	French Keyboard Layout	9-18
9-16	Italian Keyboard Layout	9-19
9-17	U.K. Keyboard Layout	9-19

Tables

Table	Title	Page
1-1	HP 110 Versions	1-2
1-2	HP 110 Specifications	1-2
1-3	Recommended Tools and Equipment	1-5
3-1	Bus Select Operation	3-5
3-2	Modem Frequencies	3-17
4-1	Comparison of Diagnostic Tests	4-1
4-2	Diagnostic Test Results	4-8
4-3	Service EPROM Diagnostic Tests	4-13
4-4	Startup Problems	4-16
4-5	Repairing the Power Supply	4-19
4-6	Repairing the Processors	4-22
4-7	Repairing the Display	4-25
4-8	Repairing the Keyboard	4-27
4-9	Repairing the Serial Interface	4-29
4-10	Repairing the Modem	4-31
4-11	Rechargers	4-35
6-1	HP 110 Replaceable Parts	6-3
6-2	Top Case Assembly Replaceable Parts	6-5
6-3	Display Assembly Replaceable Parts	6-7
6-4	Base Assembly Replaceable Parts	6-9
6-5	System PCA Replaceable Parts	6-10
6-6	I/O PCA Replaceable Parts	6-11
6-7	Modem PCA Replaceable Parts	6-16
6-8	System ROMs	6-18
6-9	Configuration EPROMs	6-19
7-1	Diagnostic Test Results	7-1
7-2	Signal Names	7-6
7-3	Diagnostic Module Replaceable Parts	7-20
8-1	Backdating Summary	8-1